



SMITH SYSTEM

Furniture for inspired learning.

Acrobat[™] Crescent Desk

Assembly Instructions

 
 
(Model # 26550, 26551)

Recommended tools:

Phillips Head screw driver











1/2" Socket or Nut Driver

Allen Wrench (included in hardware pack)

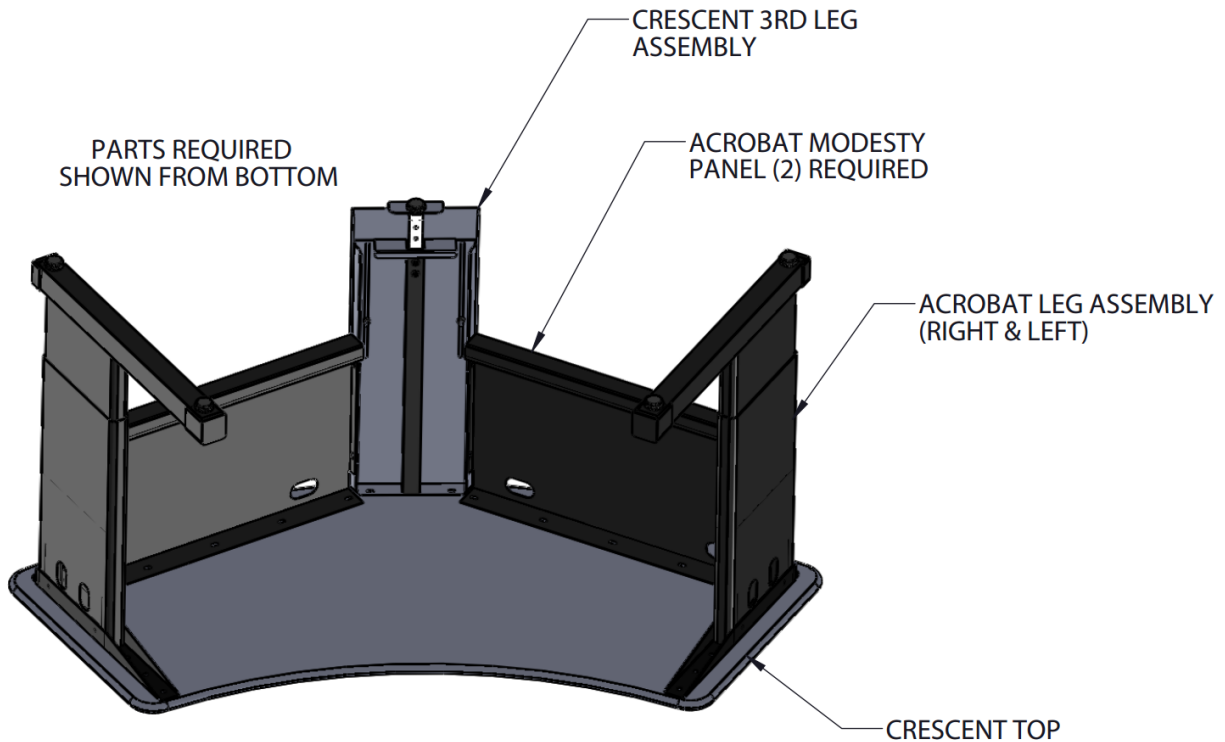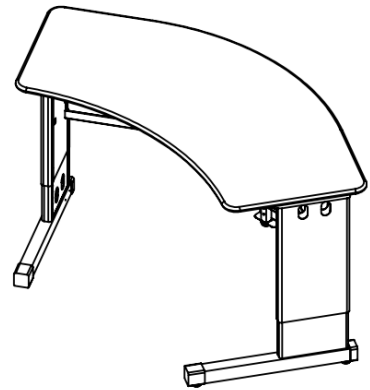

If you have damaged or missing components
please contact customer service.

          
Hardware and Components

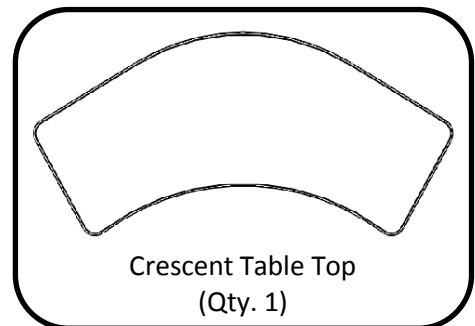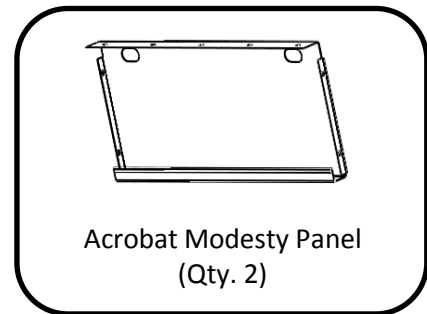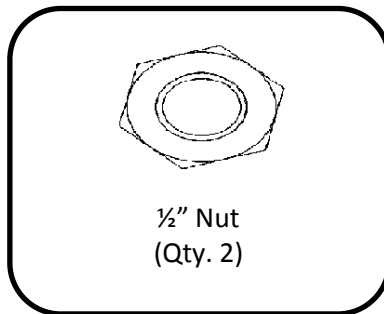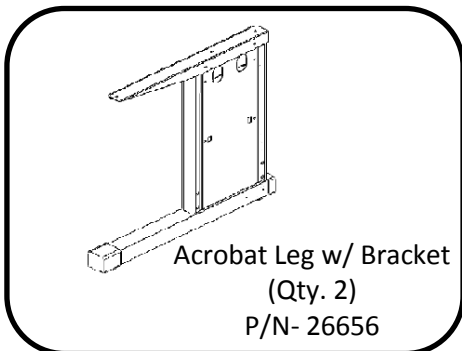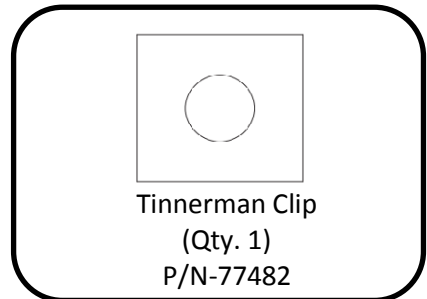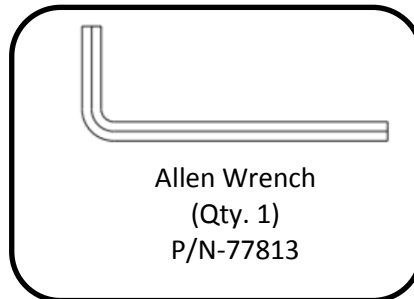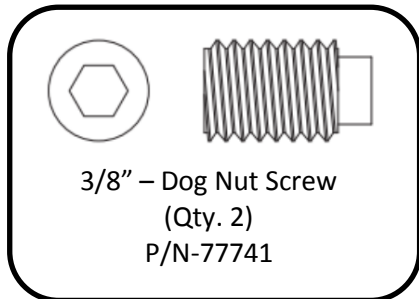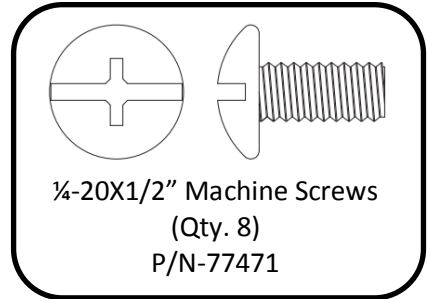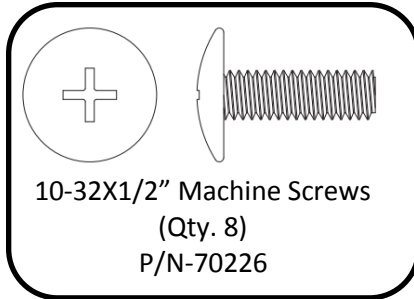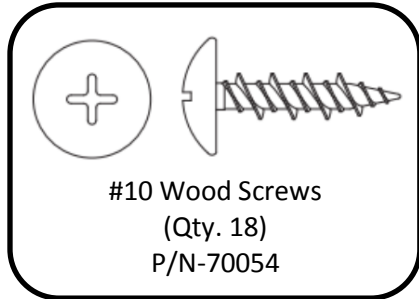


Replacement Hardware Pack 69755 Includes:

- (16) 77471- 1/4-20X1/2" Combo Machine Screw
- (8) 70226- Machine Screw 10-32X.5
- (2) 77482- Tinnerman Clip
- (16) 70054- SM Screw #10X.75 Hi/Lo Pth

 If you have damaged or missing components
please contact customer service.



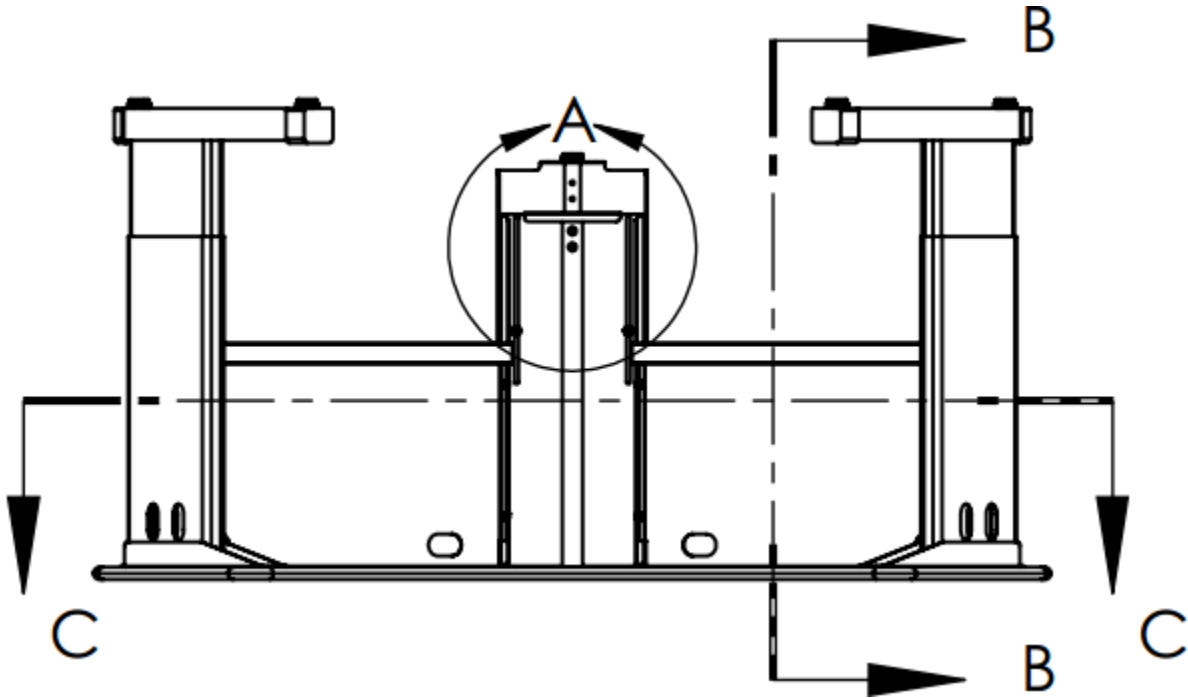


Step 1: On a clean flat surface, flip the top upside down so that the pre-drilled holes are visible. As shown in figure 1, attach the two modesty panels to the center leg using the large 1/4-20 machine screws (2 per panel). Do not tighten completely.

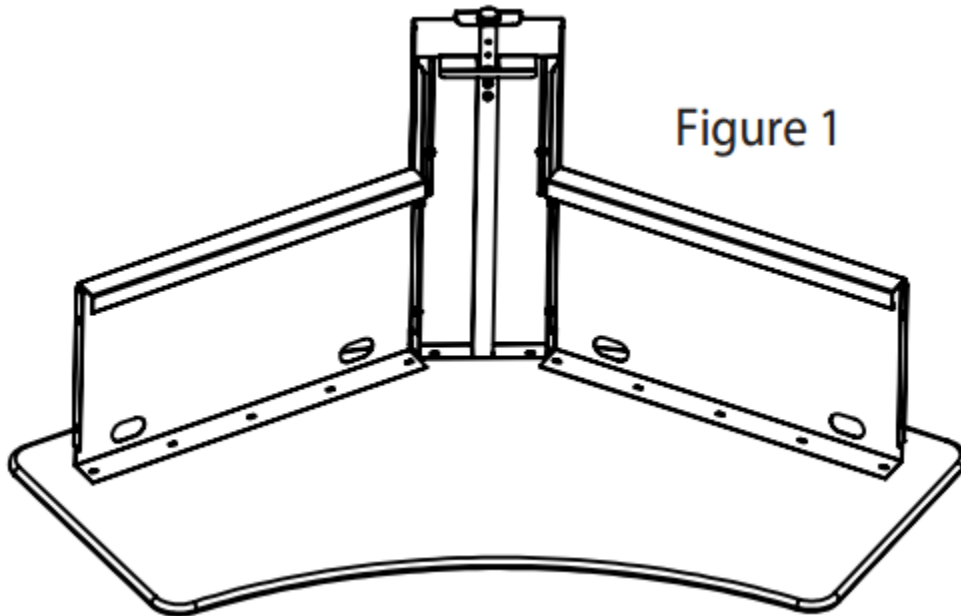


If you have damaged or missing components
please contact customer service.


Step 2: Adjust the left and the right leg to the desired height by removing the 4 machine screws in each leg and re-attach them securely (figure 2A). If a high range is required, install the Tinnerman Clips into the square openings (one per leg). As shown in figures 2&2B, attach the two legs to the modesty panels using the large 1/4-20 machine screws. Do not tighten completely.

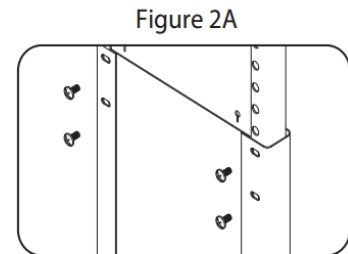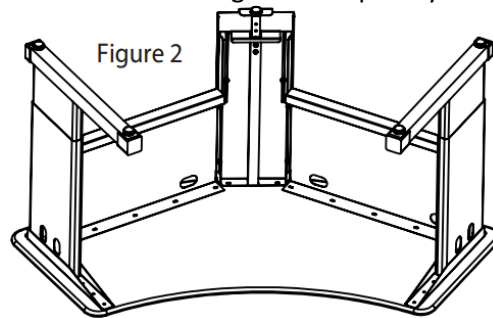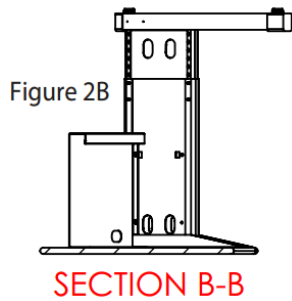

Step 3: With the legs and the panels assembled loosely, align them with the pre-drilled holes and attach them to the top with the supplied wood screws. Now tighten the machine screws between the legs and the panels.

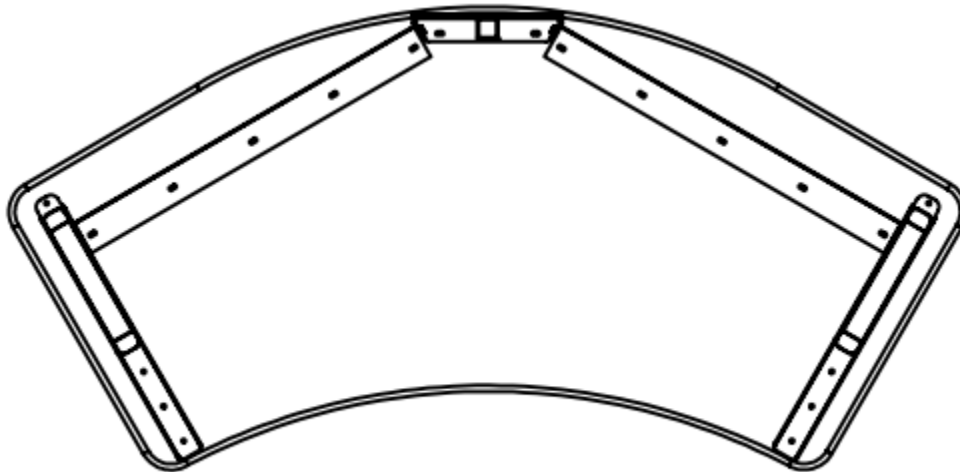

Step 4: Adjust the height of the center leg by loosening the two allen drive screws using the supplied hex key and the 1/2" nuts. Pull upward on the lower leg section to the desired height and re-tighten the hardware.

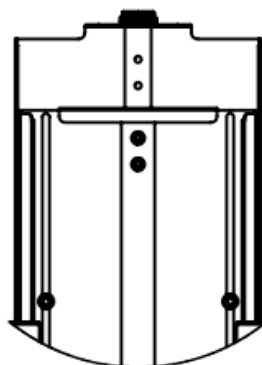

If you have damaged or missing components
please contact customer service.