ASSEMBLY INSTRUCTIONS

Special Notes:

- 1. Check that all compenents are accounted for and undamaged before assembling.
- 2. Please assemble product in a clean, dry area.
- 3. For larger units, you may need assistance from another individual to assemble the unit.
- 4. Clean the product with a mild cleaner and a damp cloth.







smithsystem.com | 1 800 328 1061

Crescent 60" # 04157 Crescent 72" # 04156


	HARDWARE PACK #67607 (INTERCHANGE ACTIVITY)				
	Part Number	Description	Quantity		
Α		3/16" Allen Wrench	(2)	A x2	
В	#70867	Connector Bolt 1/4 - 20 x 23mm	(4)		
C	#70869	Connector Nut 1/4 - 20 x 17mm	(4)		⟨♣⟩
D	#70054	#10 x 3/4" Wood Screws	(26)	B x4	

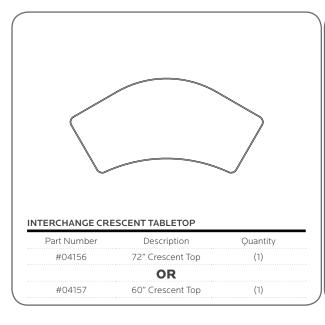

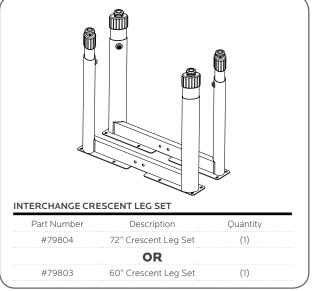




Crescent 60" # 04157 Crescent 72" # 04156

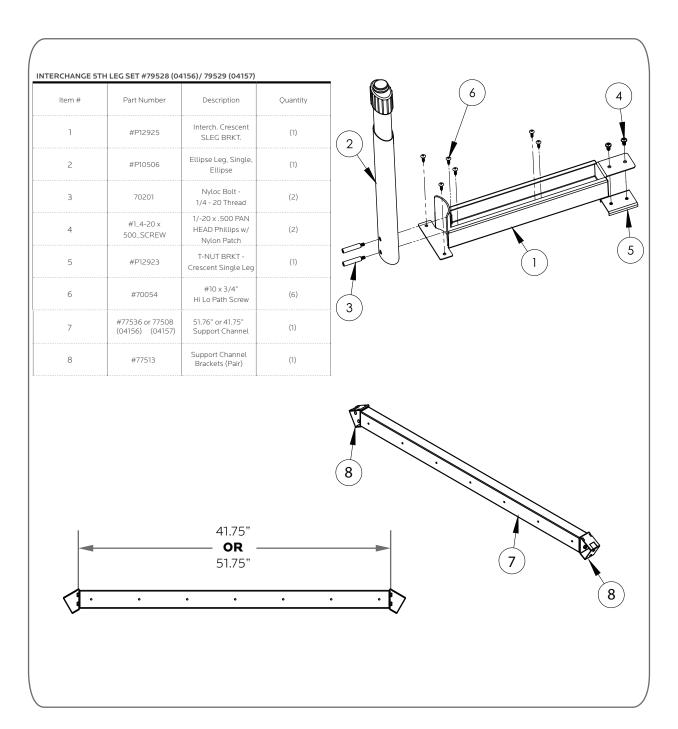



smithsystem.com | 1800 328 1061


Crescent 60" # 04157 Crescent 72" # 04156

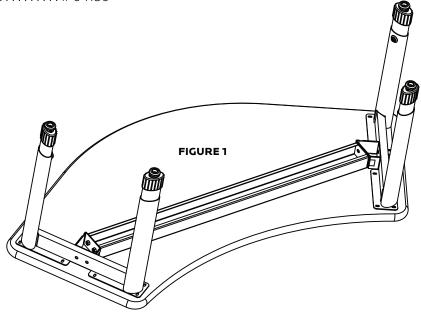

STEP 1: Place the top on a clean,dry surface laminate side down, so that the predrill holes face up.

STEP 2: Loosely attach the channel brackets (#77513) and support channel (#77536/77508) assembly using the (4) connector nuts from hardware pack that came with the leg set.


See figure 1A

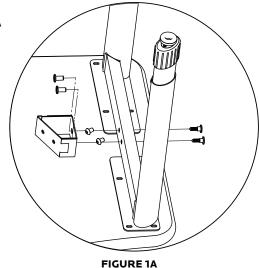



smithsystem.com | 1800 328 1061

Crescent 60" # 04157 Crescent 72" # 04156

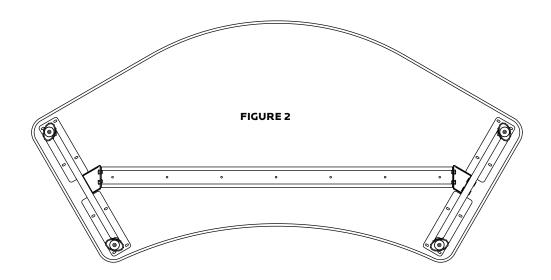


tip stagger screws during assembly; i.e. fasten one screw into one of the legs, then another screw on the other leg. Continue to stagger until all screws are used.

STEP 3: Align the slots of the leg assemblies to the pre-drilled holes of the top - using the 3/4" wood screws that came with the leg set, attach the leg assembly to the top.

STEP 4: Tighten the connector bolts and nuts to the leg sets using the two Allen Keys provided.




Crescent 60" # 04157 Crescent 72" # 04156

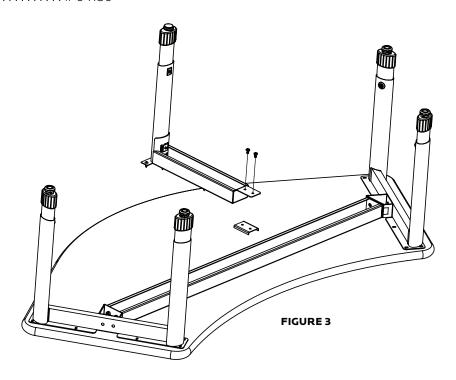

STEP 5: Rotate the T-Nut bracket 90° and insert into channel support. Loosely attach 1 / 4-20 screws through the single leg bracket (#26663). Maneuver single leg bracket until screw holes align with predrilled holes in the top - Install Screws.



Crescent 60" # 04157 Crescent 72" # 04156

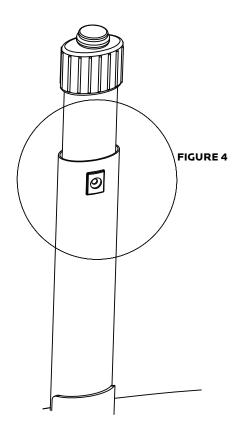

STEP 6: Adjust the leg height as desired by loosening the set screw in each leg (using the Allen Key provided). Move leg to desired height - and be sure to locate the appropriate hole in the leg.

DO NOT USE A POWER TOOL FOR LEG ADJUSTMENT! HAND TIGHTEN WITH ALLEN KEY ONLY!

STEP 7: Use the help of at least one other individual to turn the table over and into it's upright position.



smithsystem.com | 1800 328 1061