


17200 Wire Book Box Installation Instructions

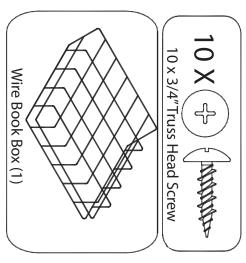


Step 1: Place table top on a smooth, clean surface with the bottom facing up.

between the legs. Step 2: Next, place the open front of the book box 1" from the edge of the table and centered

a template to drill 3/32" pilot holes, being Step 3: Use the screw tabs on the book box as careful not to drill through the top.

through the mounting tabs into the pilot holes Step 4: Insert the included #10 x 3/4" screws Tighten the screws. Your table is now ready for use.

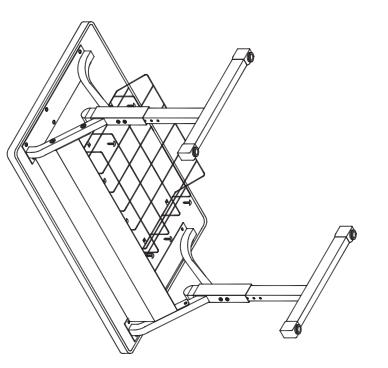

Form# 179838 Revised 2/2010 JS