




#66013 / #66014 INTERCHANGE SW TOTE TRAY HOUSING INSTALLATION

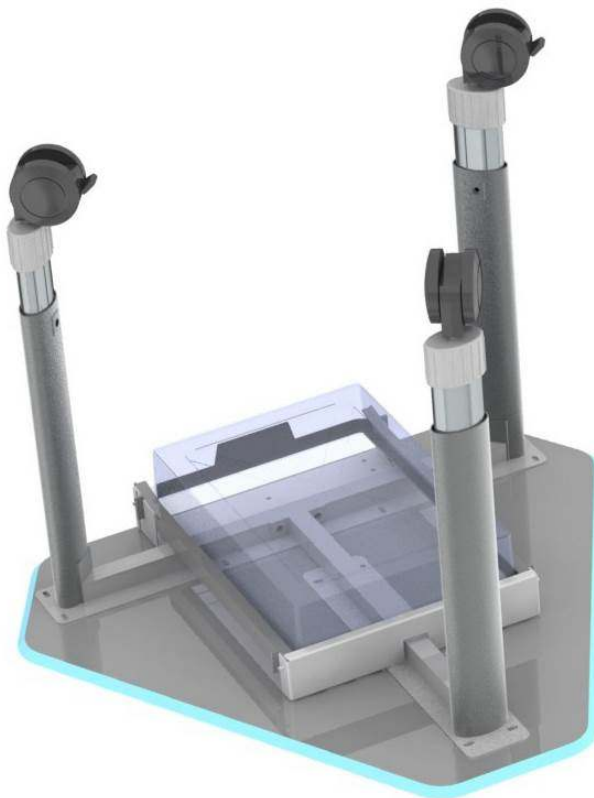

PARTS LIST:

#66013: Interchange SW Tote w/ housing

#66014: Interchange SW (standard width) housing only.

INSTALLATION TOOLS:

Phillips-Head Screwdriver


If you have damaged or missing components please contact customer service.

800-328-1061

www.smithsystem.com

INSTALLATION:

1: Turn Table over on a flat smooth work surface.

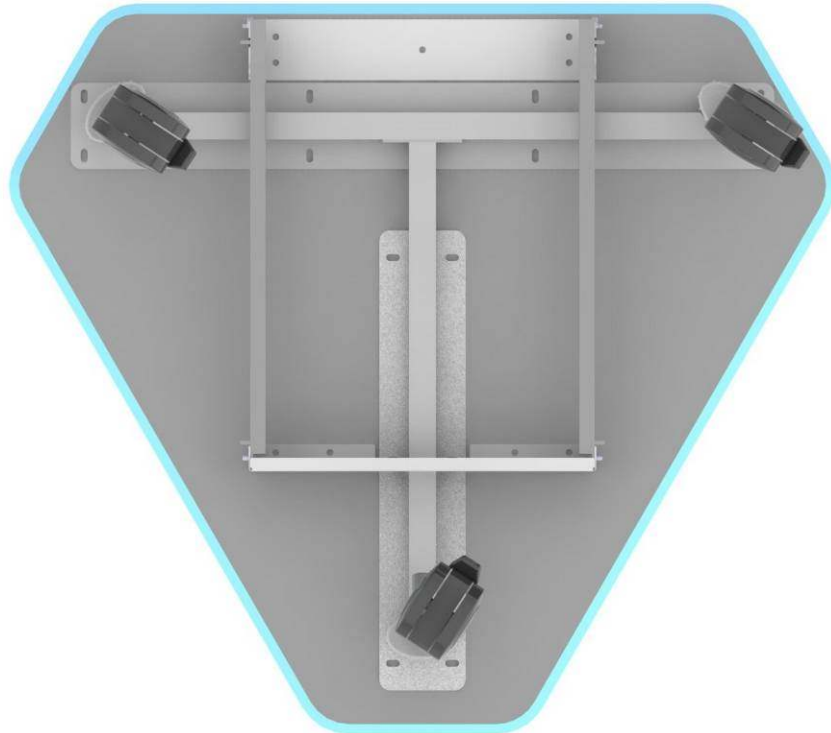

2. Remove Tote from Tote Bracket Assembly and place Tote Bracket on desk as shown.
3. Install wood screws included with Tote Bracket Assembly into holes on both the front and back bracket.
4. Flip desk over and insert Tote to complete installation.

If you have damaged or missing components please contact customer service.

800-328-1061

www.smithsystem.com