

# Hard Plastic Silhouette Student Desk


## Quick Installation Guide

### Instructions


### Required for Installation



#10 x 7/16" Plastite Screw (12)  
PN: 67214 Hdw Pack




3/8"-16 Dog Nut Screw (4)




Allen Wrench (2)



M8x12MM Cap Screws (4)

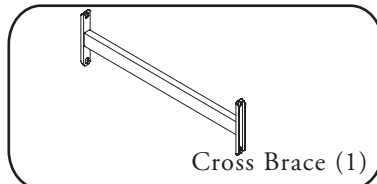

Cross Brace (1)

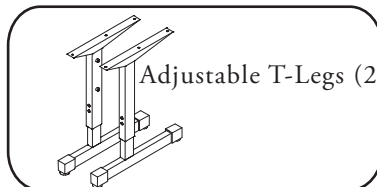

Adjustable T-Legs (2)

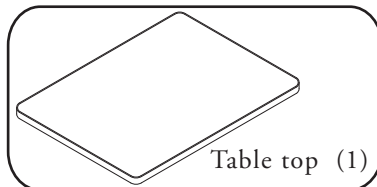


Table top (1)

Step 1: Loosely attach legs with #10 plastite screws (14) and cross brace using the M8x12MM cap screws (4). (Be sure to loosely attach the screws).

Step 2: Flip table over on a smooth, clean surface with the bottom facing up.

Step 3: Using supplied Allen Wrench go back and tighten the cap screws on the cross brace.

Step 4: Tighten the #10 plastite screws into the table. Adjust table to desired height using the supplied Allen Wrench. Carefully flip the desk over, desk is now ready for use.

### MODELS

01600 01601

01650 01651

