
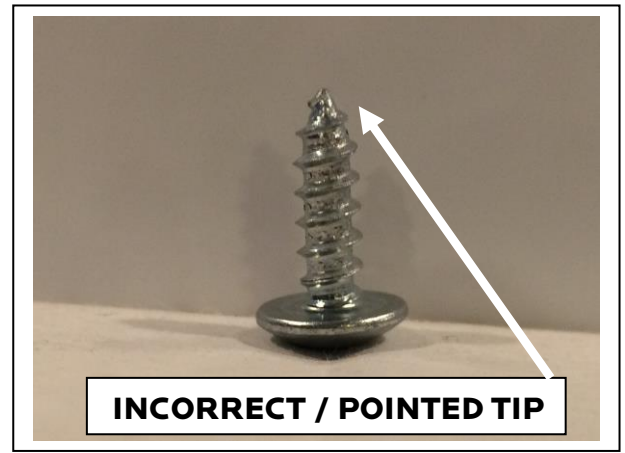


WARNING: READ THIS FIRST

IF YOU ARE ATTEMPTING TO ASSEMBLE THIS TRESPA TOP PLEASE MAKE SURE YOU ARE USING THE CORRECT SCREW.

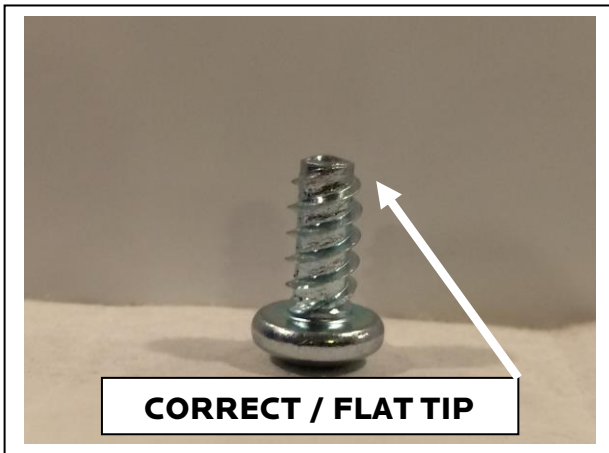

USING THE INCORRECT SCREW WILL CAUSE PERMANENT DAMAGE TO THIS TOP.

- **SMITH SYSTEM WILL NOT BE LIABLE FOR ISSUES RESULTING FROM USING THE INCORRECT SCREW**
- **IF INCORRECT SCREWS WERE INCLUDED WITH THIS TOP OR YOU CANNOT LOCATE CORRECT HARDWARE, CONTACT SMITH SYSTEM CUSTOMER SERVICE AT THE NUMBER BELOW.**

*If you have damaged or missing components
please contact customer service.*


800-328-1061

www.smithsystem.com



Trespa Top Quick Installation Guide

Required for Installation

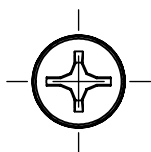

#10 x 7/16" Plastite Screw

Instructions

Step 1: Following the Instructions included with the desk frame, loosely assemble frame (finger tight).

Step 2: Flip Trespa Top over on a smooth, clean surface with the bottom facing up.

Step 3: Align the frame assembly with the pilot holes in the Trespa Top.

Step 4: Loosely install the supplied #10 Plastite screws in each of the pilot holes.

Step 5: Using the supplied Allen wrench go back and tighten bolts in frame assembly.

Step 6: Set the Torque Setting of your Drill Driver to approximately (18) or (75% of maximum). Go back and tighten all of the #10 Plastite screws being careful not to over tighten as this may cause the hole in the plastic top to strip-out. **DO NOT OVER-TORQUE**

NOTE: Because of variations in Drill Drivers you may need to reduce the Torque Setting on your particular model to prevent over tightening.

MODELS

11265 11268 11271 25705 25715 25725

25735

If you have damaged or missing components please contact customer service.

800-328-1061

www.smithsystem.com

