





Trespa Top Quick Installation Guide

Required for Installation

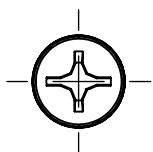

#10 x 7/16" Plastite Screw

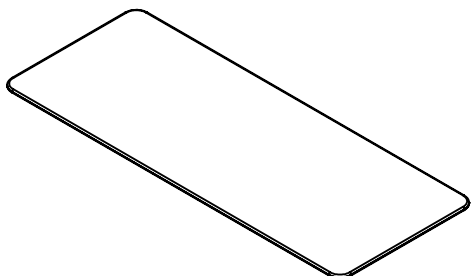

Instructions

Step 1: Following the Instructions included with the desk frame, loosely assemble frame (finger tight).
Step 2: Flip Trespa Top over on a smooth, clean surface with the bottom facing up.
Step 3: Align the frame assembly with the pilot holes in the Trespa Top.
Step 4: Loosely install the supplied #10 Plastite screws in each of the pilot holes.
Step 5: Using the supplied Allen wrench go back and tighten bolts in frame assembly.
Step 6: Set the Torque Setting of your Drill Driver to approximately (18) or (75% of maximum). Go back and tighten all of the #10 Plastite screws being careful not to over tighten as this may cause the hole in the plastic top to strip-out. **DO NOT OVER-TORQUE**
NOTE: Because of variations in Drill Drivers you may need to reduce the Torque Setting on your particular model to prevent over tightening.

MODELS

11265 11268 11271 25705 25715 25725 25735



If you have damaged or missing components please contact customer service.

800-328-1061

www.smithsystem.com

Form #179785

04/09