



SMITHSYSTEM

Furniture for inspired learning.

Tie Plate Instalation Guide (Model 17220)





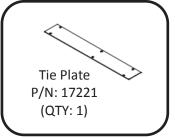


Assembly Instructions

Step 1: Place both assembled flex desks on a smooth, clean surface with the bottom facing up.

Step 2: Unscrew the 3 wood screws from each Y-leg closest to the table edge (diagram 1).

Step 3: Align the tie plate with the Y-leg plate holes and use the 6 wood screws to attach (Diagram 1).

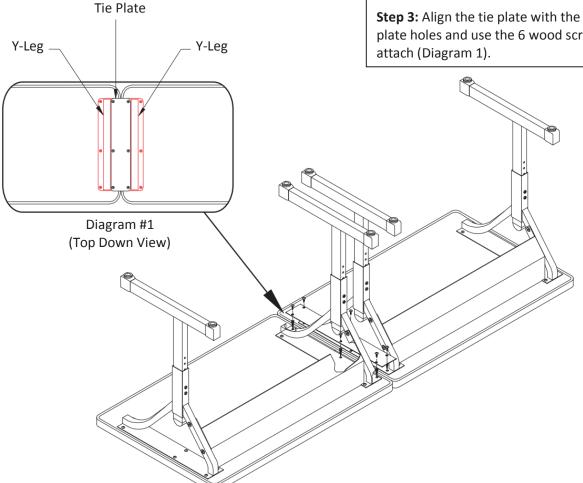

For Assistance in assembling product, missing or damaged parts, or to place an order, please contact customer service at 800-328-1061 You may also place your order online at

www.smithsystem.com

Form# 179841 04/2013