


# Assembly Instructions


Planner Studio

Maker Table

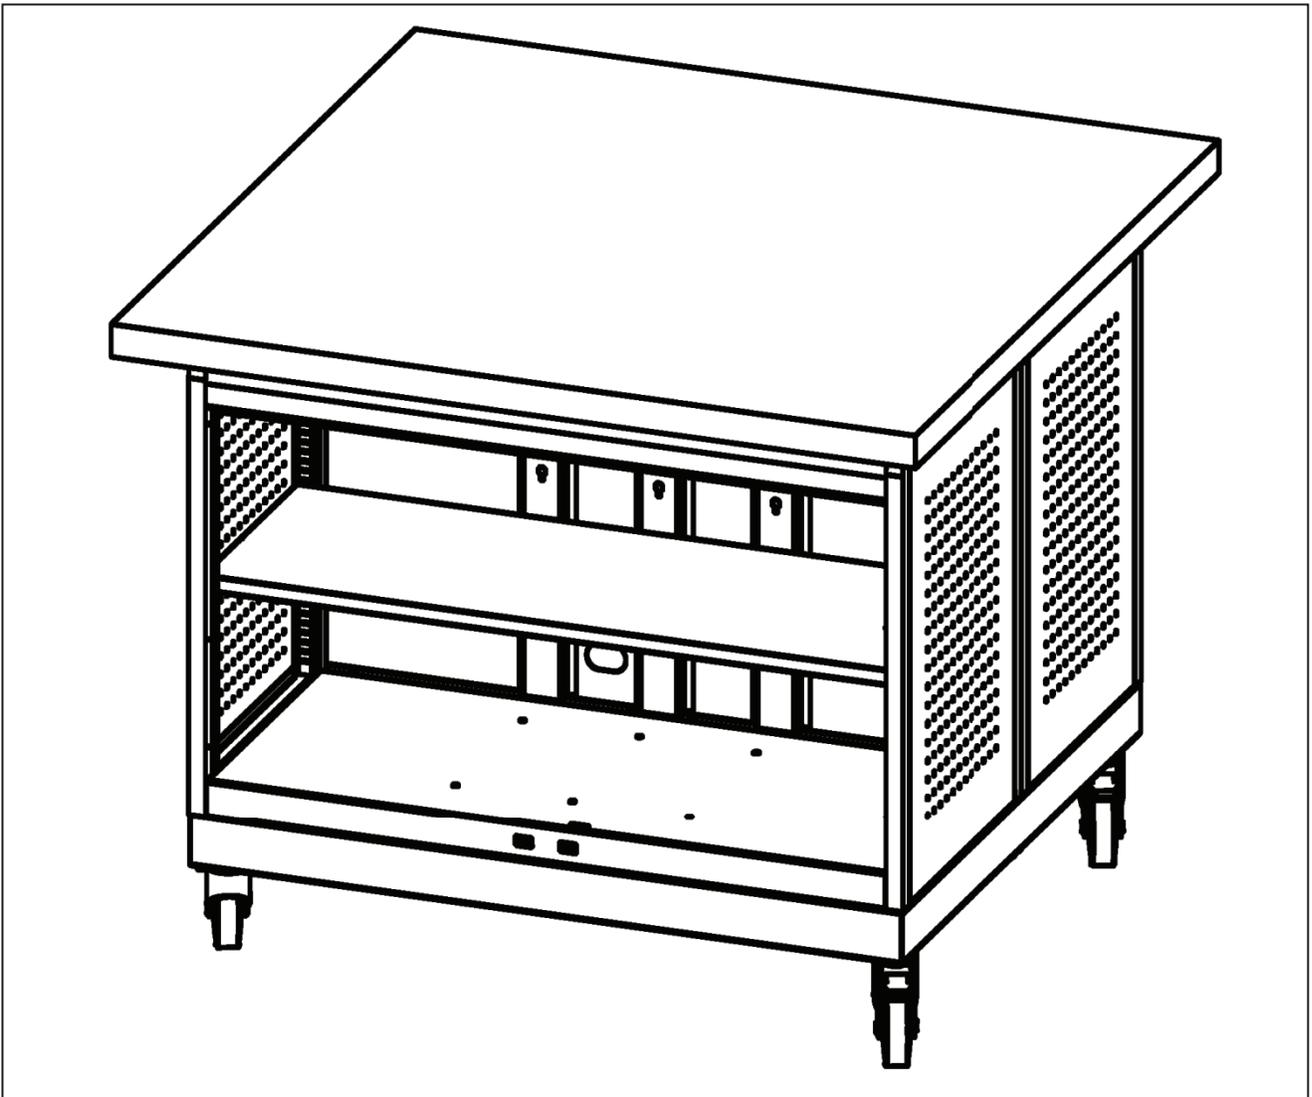


If you have damaged or missing components,  
please contact customer service at 1-800-328-1061


# Hardware and Components

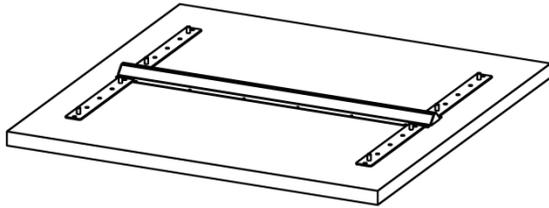


**PLANNER STUDIO MAKER TOP**  
QTY. 1

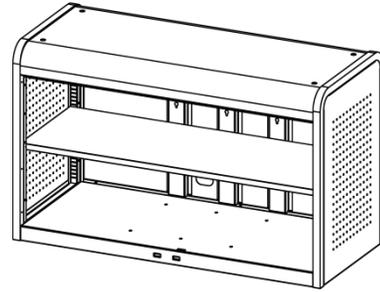


**CASCADE MEGA CASE**  
QTY. 2

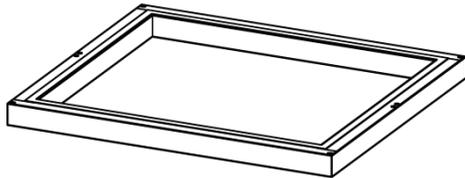


**PLANNER STUDIO MAKER BASE**  
QTY. 1

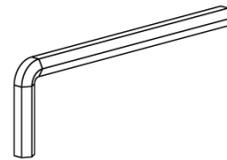


**3/16" ALLEN WRENCH**  
QTY. 1




**3/8" LOCK WASHER**  
QTY. 8

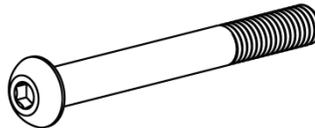


**3/8"-16 X 3.5" BOLT**  
QTY. 8




**3/8"-16 LOCK NUT**  
QTY. 8

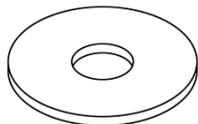

**3/8" X 1 1/4" OD OVERSIZED WASHER**  
QTY. 8

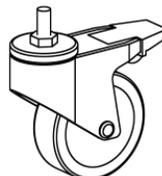

**4" CASTER**  
QTY. 4

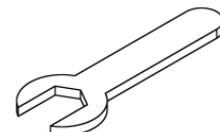


**CASTER WRENCH**  
QTY. 1

## Special Notes:


- TOOLS REQUIRED:
  - 9/16" socket & ratchet, or 9/16" wrench.
- Check that all components are accounted for and undamaged before assembling.
- Please assemble the product in a clean and dry area.
- You will need another person to help assemble the product. Team lifting required.
- Clean the product with a mild cleaner and a damp cloth.

# Assembly Instructions


1. Lay both Cascade mega cases on a clean smooth surface that will not harm the paint finish. Lay cases together as shown so that the underside of the cases is exposed. **Cases are heavy, team lifting is advised.**

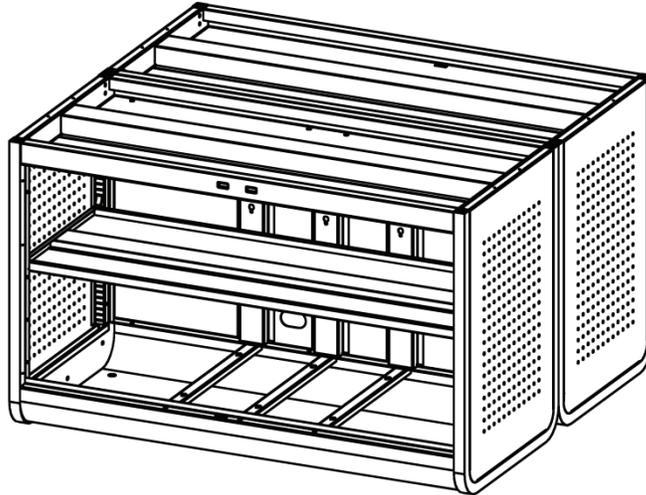


2. Position the base onto the cases and line up holes, as shown. **Base is heavy, team lifting is advised.**

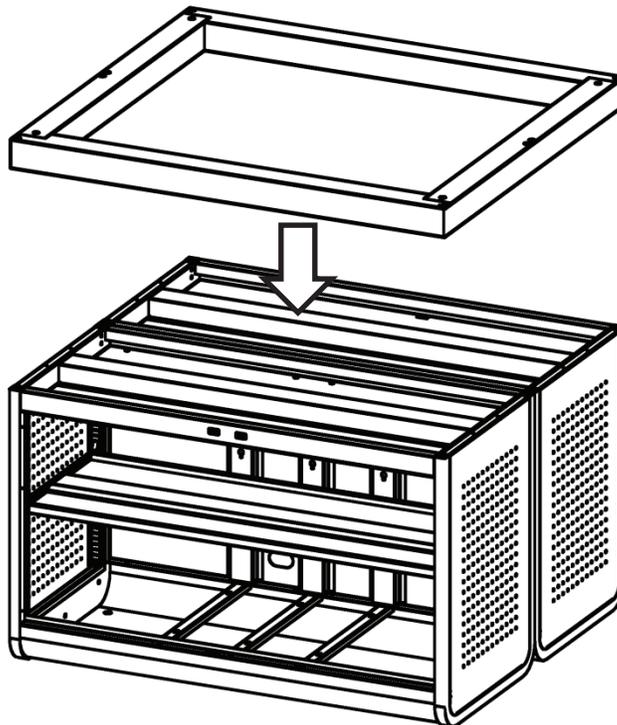


3. Attach the base to the cases using the 3/8"-16 x 3.5" bolts and 3/8" lock washers.  
**Helpful Hint:** Use clamps on the touch rails of the cases to help line up the holes with the base.

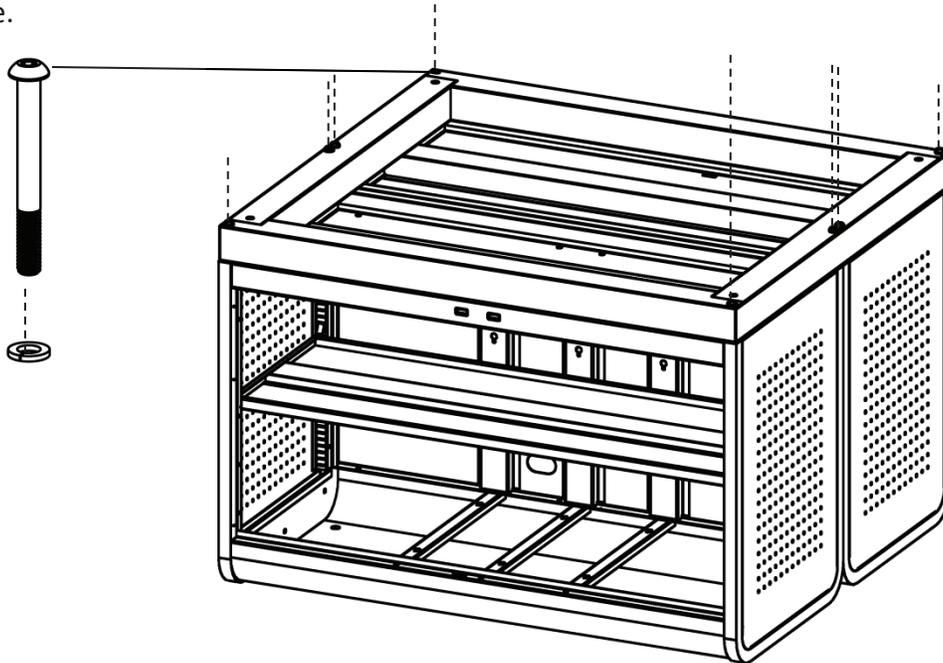


4. Install casters using the caster wrench provided. Hand tighten until very snug.

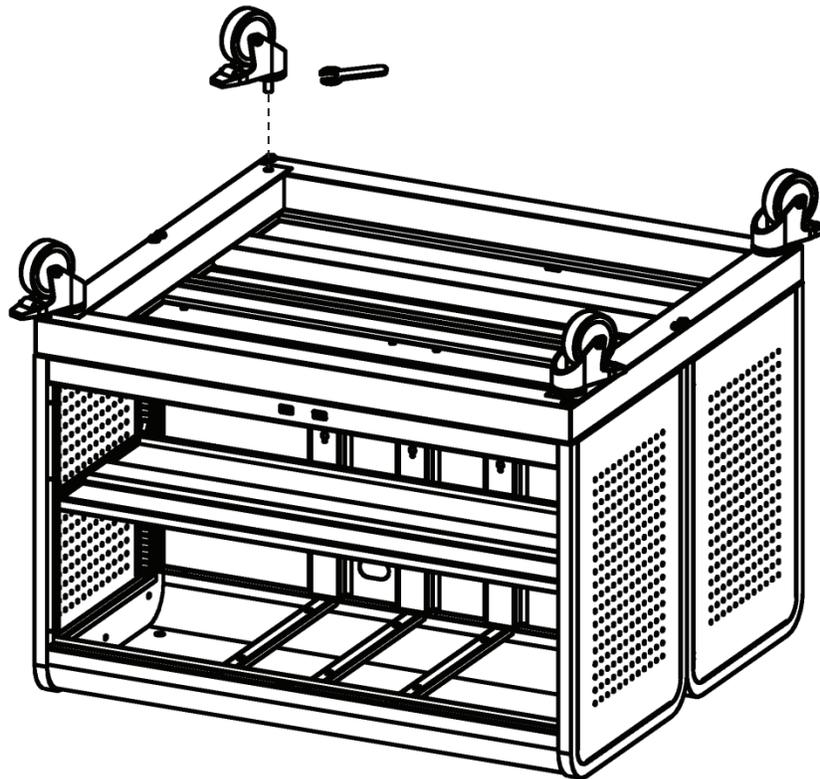



4. With a partner, team lift cases and flip to the upright position.  
**Helpful Hint:** Lock all casters to prevent unexpected rolling when casters touch down.

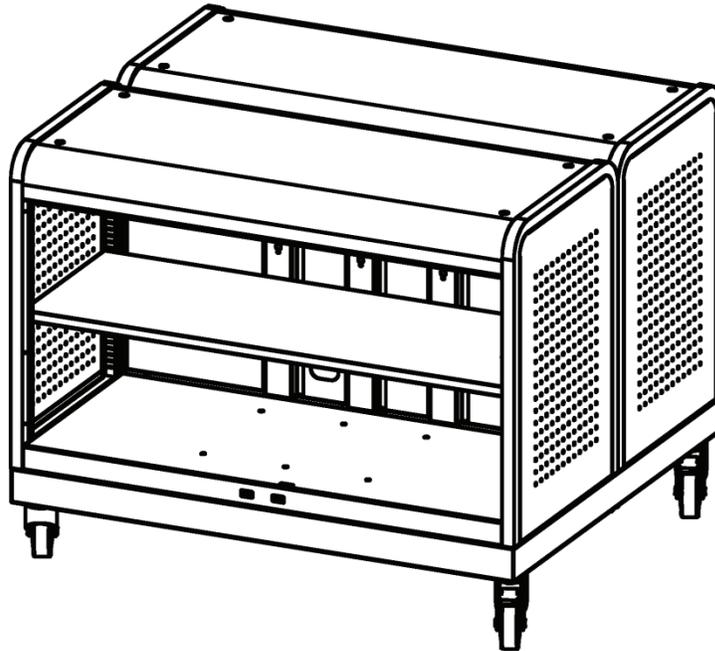

5. Place top on cases making sure to line up mounting holes. **Top is heavy, team lifting is advised.**

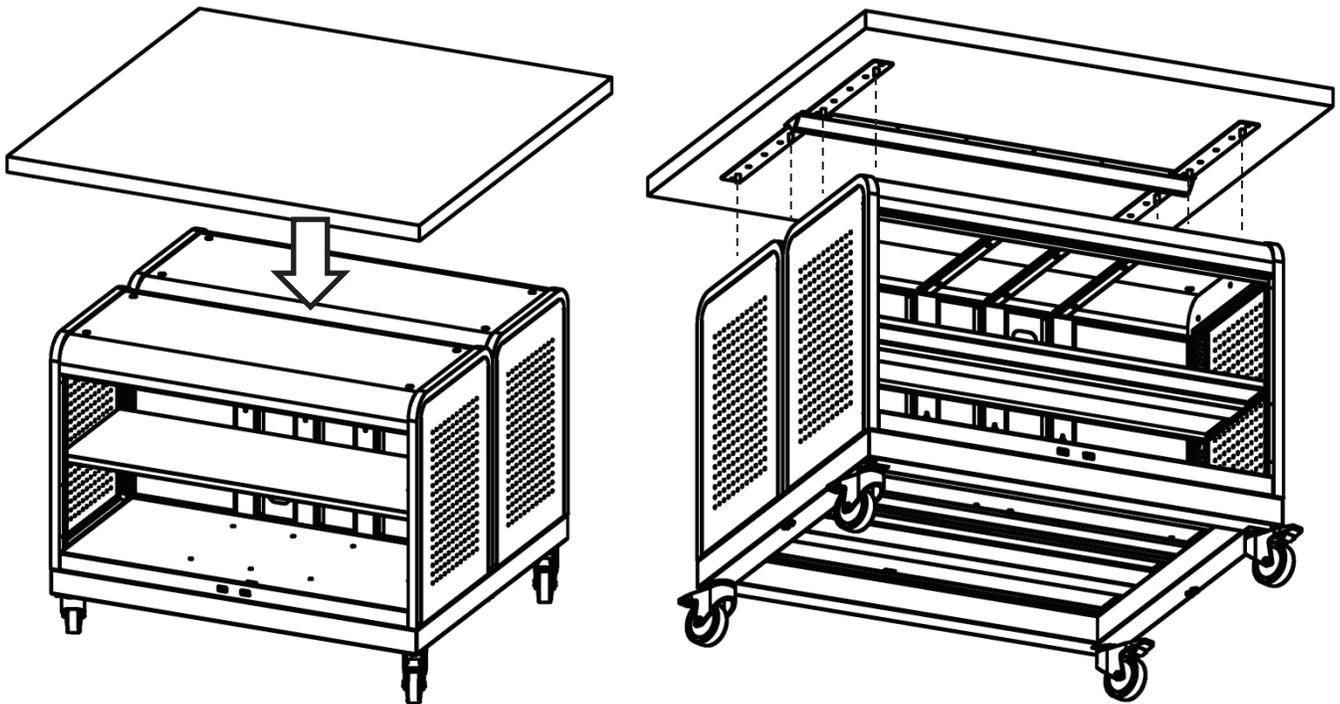

6. Attach the top to the cases using the 3/8" x 1 1/4" OD oversized washers and 3/8"-16 lock nuts with a 9/16" socket & ratchet, or 9/16" wrench.

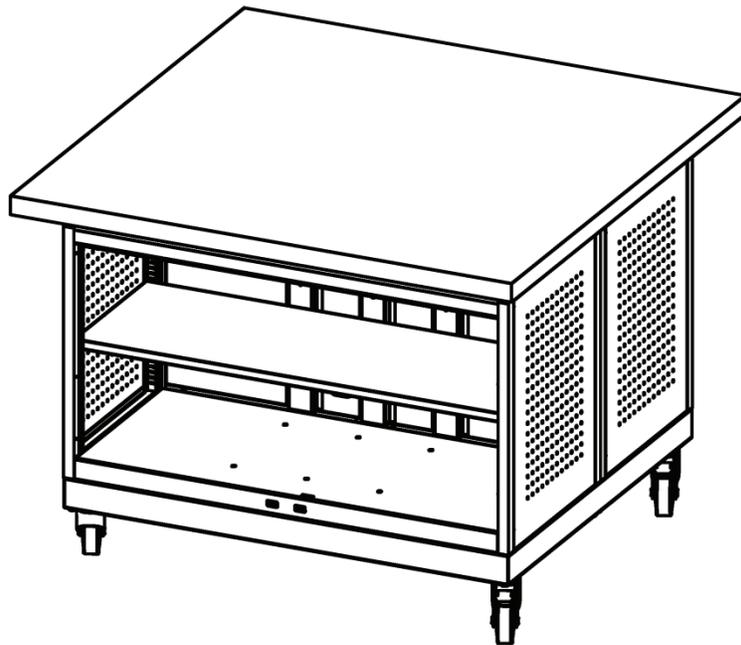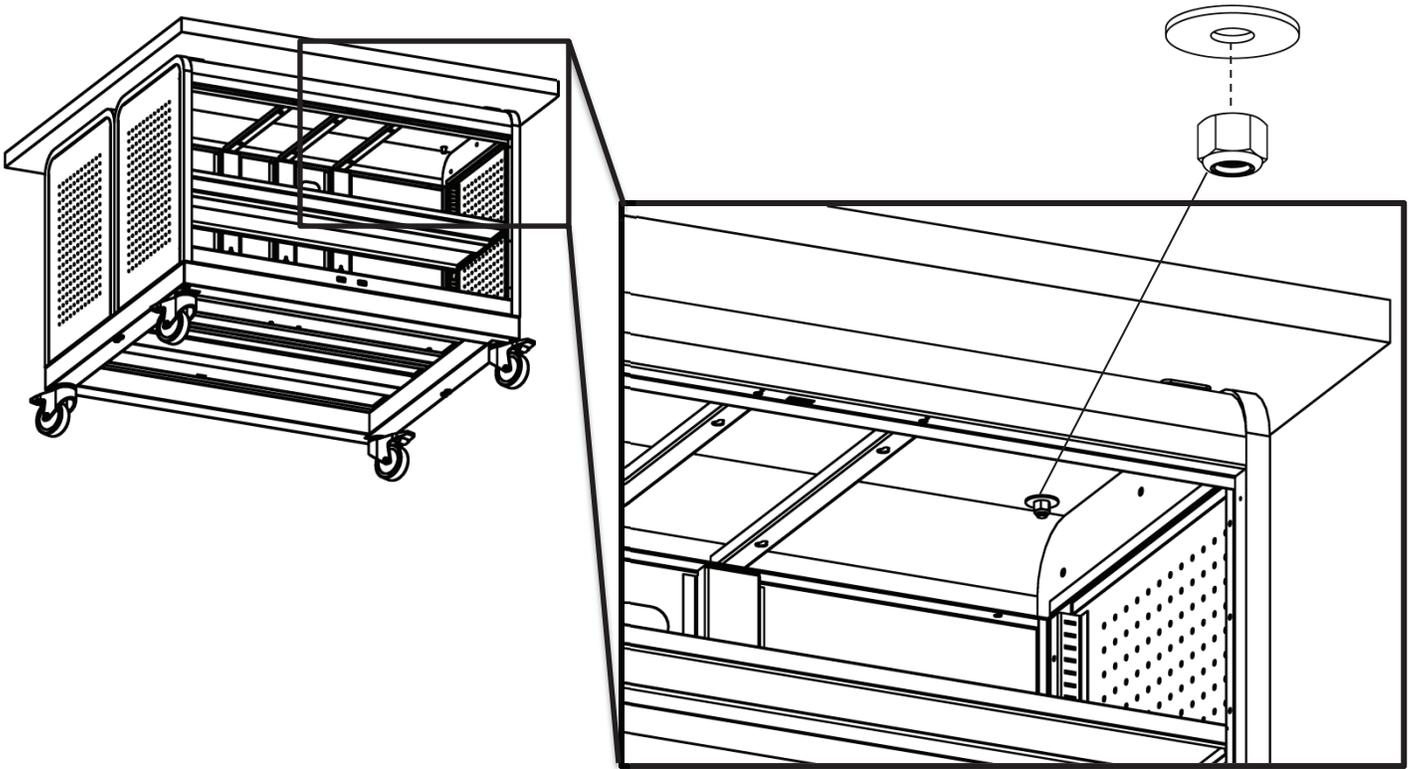

**ASSEMBLY COMPLETE**