


Embedded

Tools Required: (unit ships fully assembled)

- For embedded: 3" dia drill for masonry
- For embedded: anchoring cement
- masonry drill and bits
- compressed air for clearing holes of debris

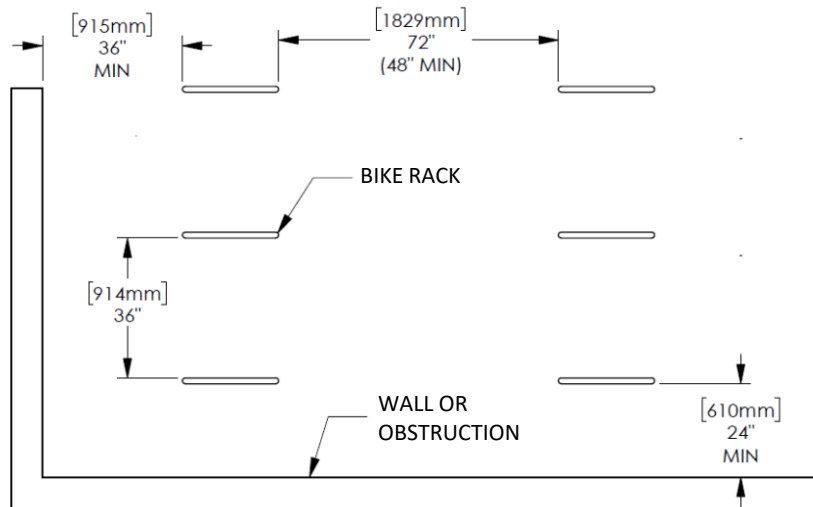


Recommended spacing, according to Association of Pedestrian and Bicycle Professionals (APBP)

ASSEMBLE WITH CARE! Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on concrete or other hard or textured surface – this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.

EMBEDDED INSTALLATION

1. Core drill 3" diameter (minimum) holes 6" deep.
2. Prepare the holes for outdoor anchoring cement.
3. Follow the manufacturer's instructions for blowing out dust, filling with water, scrubbing, and removing excess water.
4. Place the bike rack back into position and fill the holes with anchoring cement.

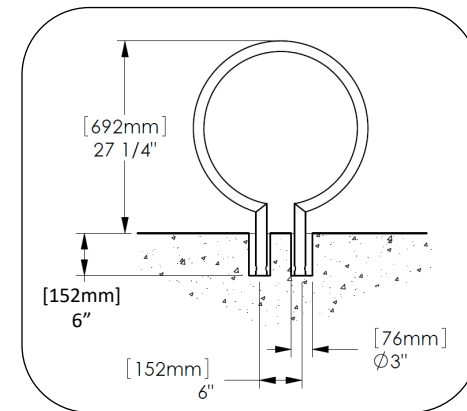

Side Elevation, embedded