



Dining table


## Included components:

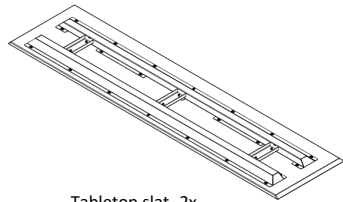


Tabletop slat - 2x

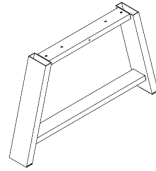

Dining table support - 2x

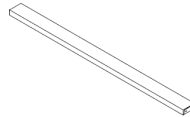

Cross brace - 1x

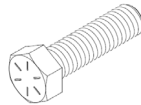

3/8-16 x 1-3/8" hex bolt - 12x



3/8 washer - 12x

## Tools required for assembly

- Safety glasses
- 9/16" socket wrench
- Protective padding material

## PROCEDURE FOR ASSEMBLY:

**Note:** DO NOT DRAG table across concrete or other rough surfaces. This could damage the powdercoat finish. After inspecting parts, packaging skid and materials may be used for assembling units. Loosely install all hardware until unit is fully assembled. Tighten hardware.

1. Place tabletop slats upside down on protective padding. Beveled edge should be to the outside for both slats.
2. Set supports in approximate position.
3. Install washers and 3/8-16 hex bolts, 4 per support, as shown in Fig. 1. Check that the gap between table slats is even. Adjust supports as necessary.
4. Install cross brace to supports using 3/8-16 hex bolts and washers, 2 per side, see Fig. 2. Open side of bracing will face the ground when table is in upright position.
5. Turn table upright and set in position.

**ASSEMBLE WITH CARE!** Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on concrete or other hard or textured surface – this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.

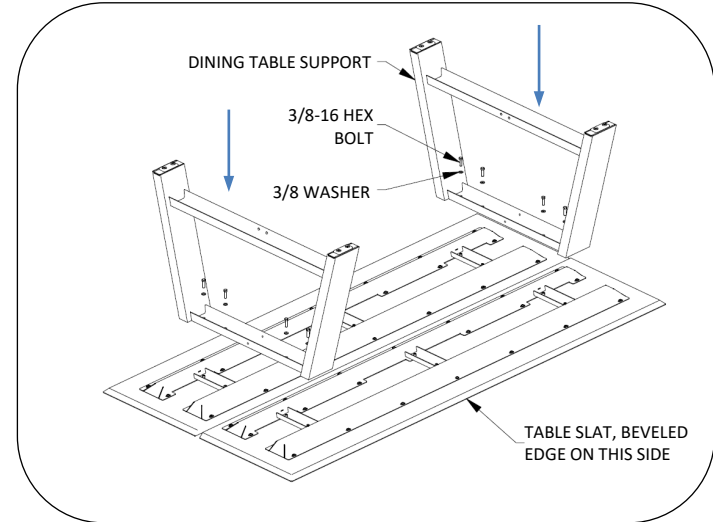


Fig. 1 – attach supports to tabletop slats

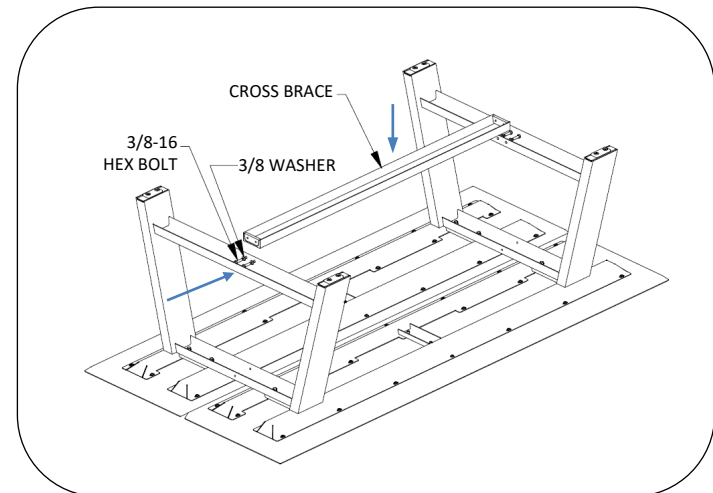


Fig. 2 – attach cross brace to supports

---

## Tools required for surface mounting:

- Safety glasses
- (4) maximum 3/8" dia. non-corrosive anchors per unit
- hex key, 7/32"
- hammer drill with appropriate size bits for specified anchors
- compressed air and wire brush for clearing holes of debris

## INSTALLATION:

**Note:** DO NOT DRAG unit across concrete or other rough surfaces. This could damage the powder coat finish.

1. Tighten surface mount tabs, if necessary.
2. Set unit in position.
3. Mark hole locations.
4. Move unit. Drill holes according to anchor manufacturer's recommendations.
5. Clear holes of debris. Set unit back in position.
6. Install anchors.

NOTE: Anchor tabs are 3/8" thick.