

## Included Components

- (1) Tabletop
- (1) Table Support
- (4) 1/4-20 x 3/4" Phillips truss head tapping screws

## Tools Required

- #3 Phillips screwdriver
- (3) Non-corrosive anchors, maximum  $\varnothing 3/8"$  [9mm].

## Recommended hardware:

Although installer is responsible for anchoring procedure and hardware, we suggest the following:

For poured concrete installation:

- 3/8" diameter wedge or sleeve type expansion anchor at least 3" long, or 3/8"-16 x 4" threaded anchor rod with anchoring adhesive

For paver installation:

- If pavers are installed over poured concrete, use 3/8" diameter wedge type expansion anchor with enough length to go through brick and into concrete

**ASSEMBLE WITH CARE!** Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on concrete or other hard or textured surface – this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.

## Tabletop Assembly:

**Note:** Use  $\varnothing 18"$  support for 24" and 30" tables. Use  $\varnothing 23"$  support for all others.


1. Place table top upside down on non-marring level surface.
2. Place table support upside down on table top and align holes.

**The use of power drivers is not recommended. Threads or threaded inserts may be damaged or broken due to over-torquing.**


3. Install hardware. Tighten all table top fasteners until snug, then tighten additional 1/4 turn.
4. Turn table right side up using at least two people.
5. Freestanding table can be set in position.

## Surface Mount Installation:

1. Place unit in desired position.
2. Mark the holes.
3. Move the unit and drill the holes.
4. Place unit in position and install with anchors according to anchor manufacturer's recommendations.

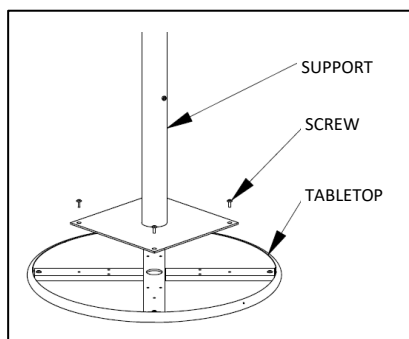

Tabletop to support assembly

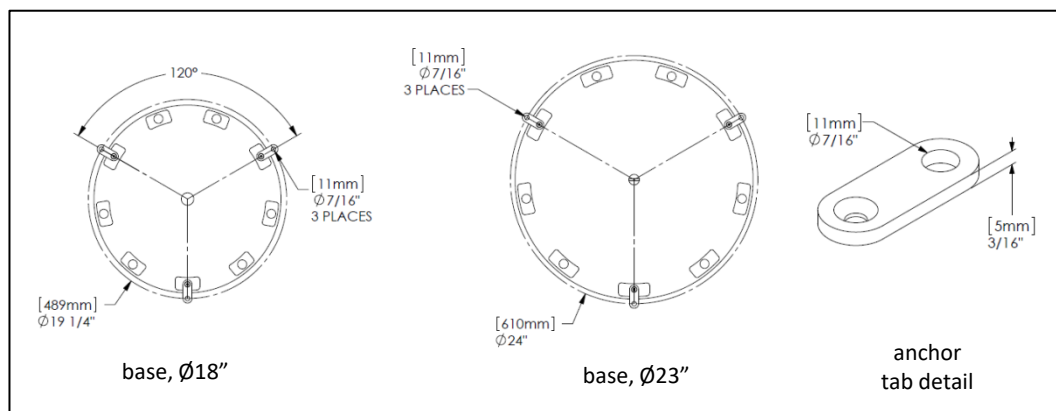

base,  $\varnothing 18"$

base,  $\varnothing 23"$

anchor  
tab detail