


Assembly Instructions


Power Cord Hook

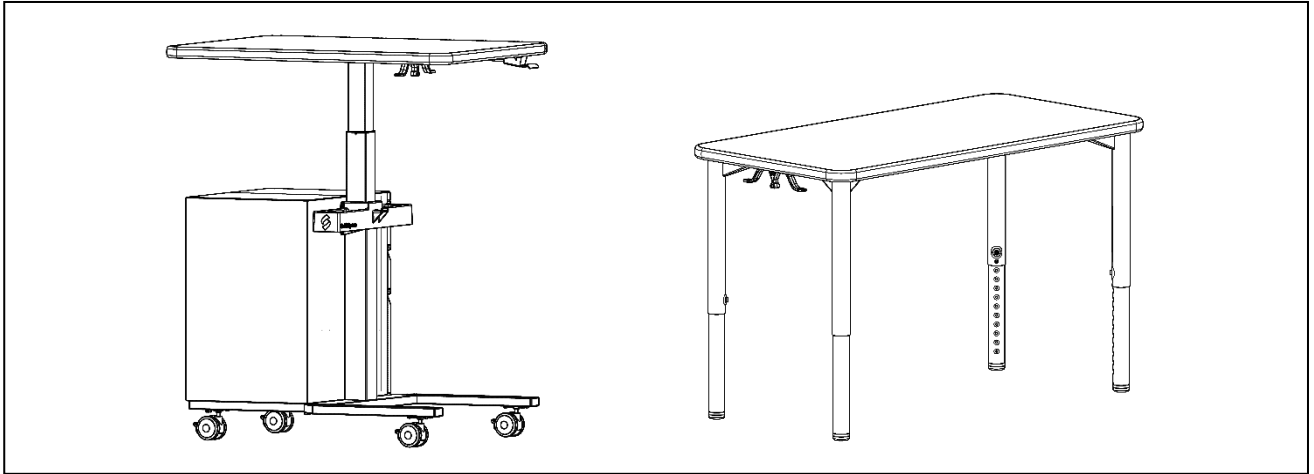

Hardware and Components

POWER CORD HOOK PACK (PN:60500)

ITEM NO.	PartNo	REV	DESCRIPTION	QTY.
1	P15723	B	MOBILE TEACHER WORKSTATION-POWER CORD HOOK	1
2	60496	A	MOBILE TEACHER WORKSTATION-POWER CORD HOOK HARDWARE PACK	1

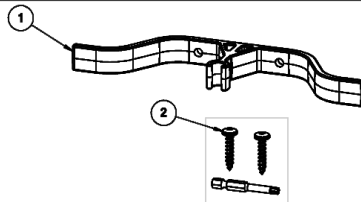

Assembly Guidelines


Special Notes:

- TOOLS REQUIRED:
 - Drill w/ T25 Torx driver bit (bit provided).
 - NOTE:** Do **NOT** use impact drills.
- Check that all components are accounted for and undamaged before assembling.
- Please assemble the product in a clean and dry area.
- Clean the product with a mild cleaner and a damp cloth.
- Replacement Hardware Packs:
 - 60496-R Replacement Power Cord Hook Hardware Pack


If you have damaged or missing components,
please contact customer service at 1-800-328-1061

Assembly Instructions

1. Unpack and confirm all parts are present. Flip table or desk over on a smooth flat surface for ease of assembly.
2. Place the power cord hook against the top and secure using the two (2) #12 x 1-1/8" screws with the provided T25 Torx bit. **Do NOT overtighten screws.**

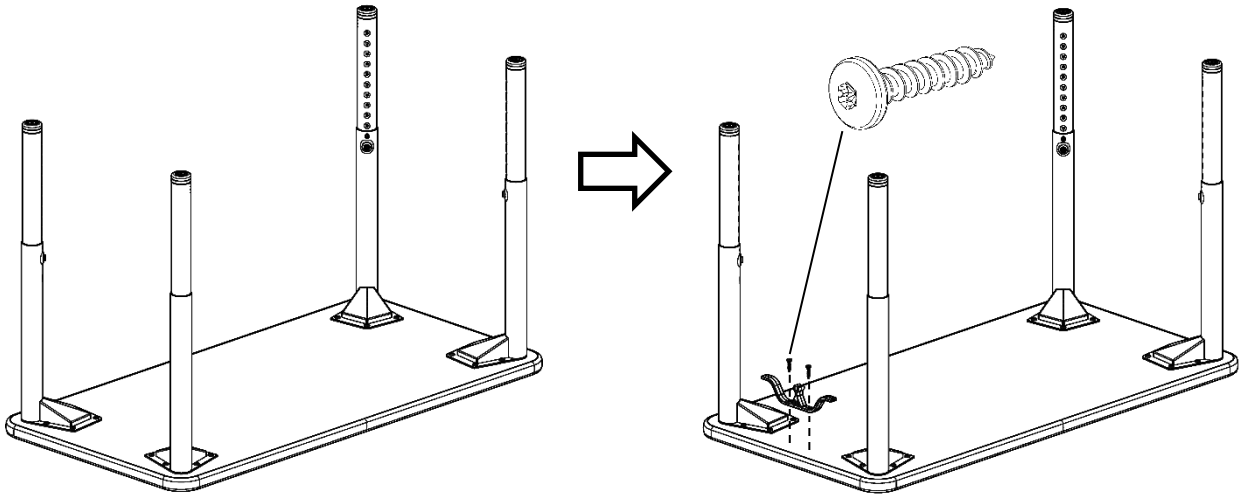

3. We suggest installing the hook at least 1" from the t-mold or edge banding to prevent the power cord from sticking out past the edge of the table. Flip the table back over.

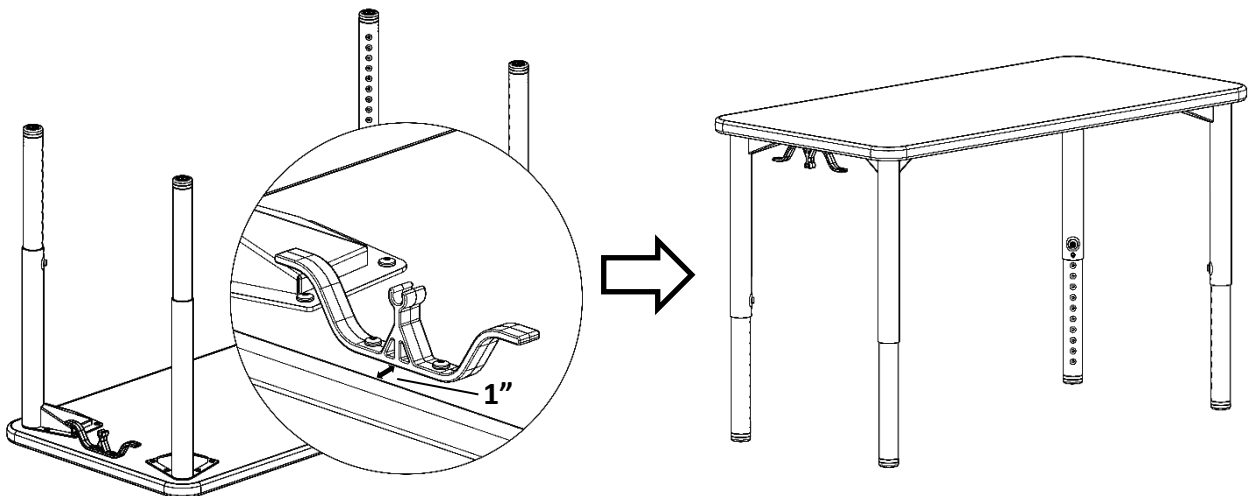

ASSEMBLY COMPLETE