



SMITH SYSTEM

Furniture for inspired learning.

Horseshoe Activity Table Assembly Instructions



SMITH SYSTEM









For Assistance in assembling product, missing or damaged parts,
or to place an order, please contact customer service at 800-328-1061
You may also place your order online at
www.smithsystem.com

Special Notes:

1. Check that all components are accounted for and undamaged before assembling.
2. Please assemble product in a clean and dry area.
3. For larger units, you may need another person to help assemble the product.
4. Clean the product with a mild cleaner and a damp cloth.

Hardware and Components

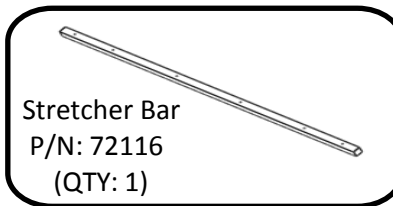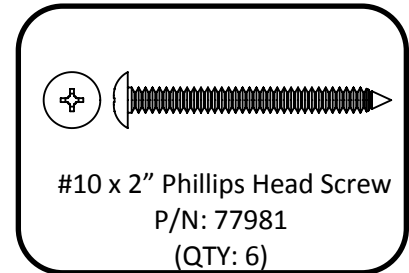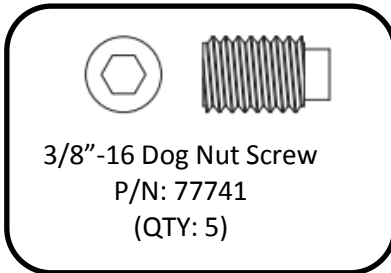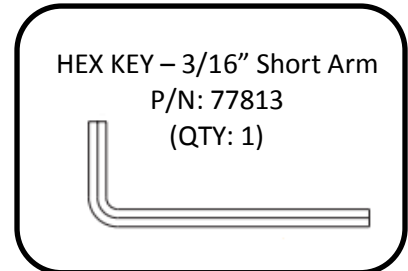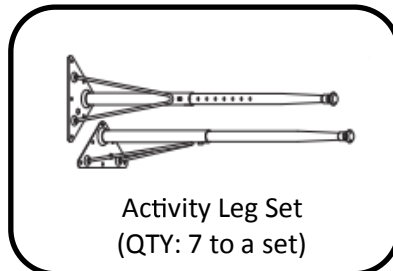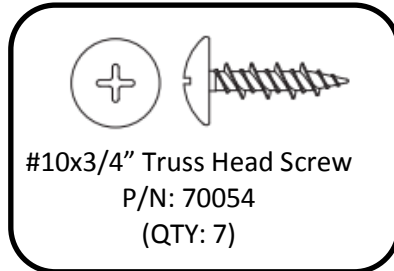

Assembly Instructions

Step 1: Place the table on a smooth, clean surface with the bottom facing up.

Step 2: Install the leg into the EOB bracket which is already mounted on the table

Step 3: Gently tap the legs into position with a rubber mallet until the pilot hole in the table is visible through the center hole on the leg plate.


Step 4: Use the (7) #10x3/4" screws to secure each leg to the table. Place screw in the center of leg plate (See Diagram #2).

For Assistance in assembling product, missing or damaged parts,
or to place an order, please contact customer service at 800-328-1061

You may also place your order online at

Step 5: Once the legs are securely attached, adjust the height of the legs to the desired height using the allen wrench provided (See Diagram #3).

Step 6: Attach the stretcher bar to pre-drilled hole in the top using (6) #10x2" screws.

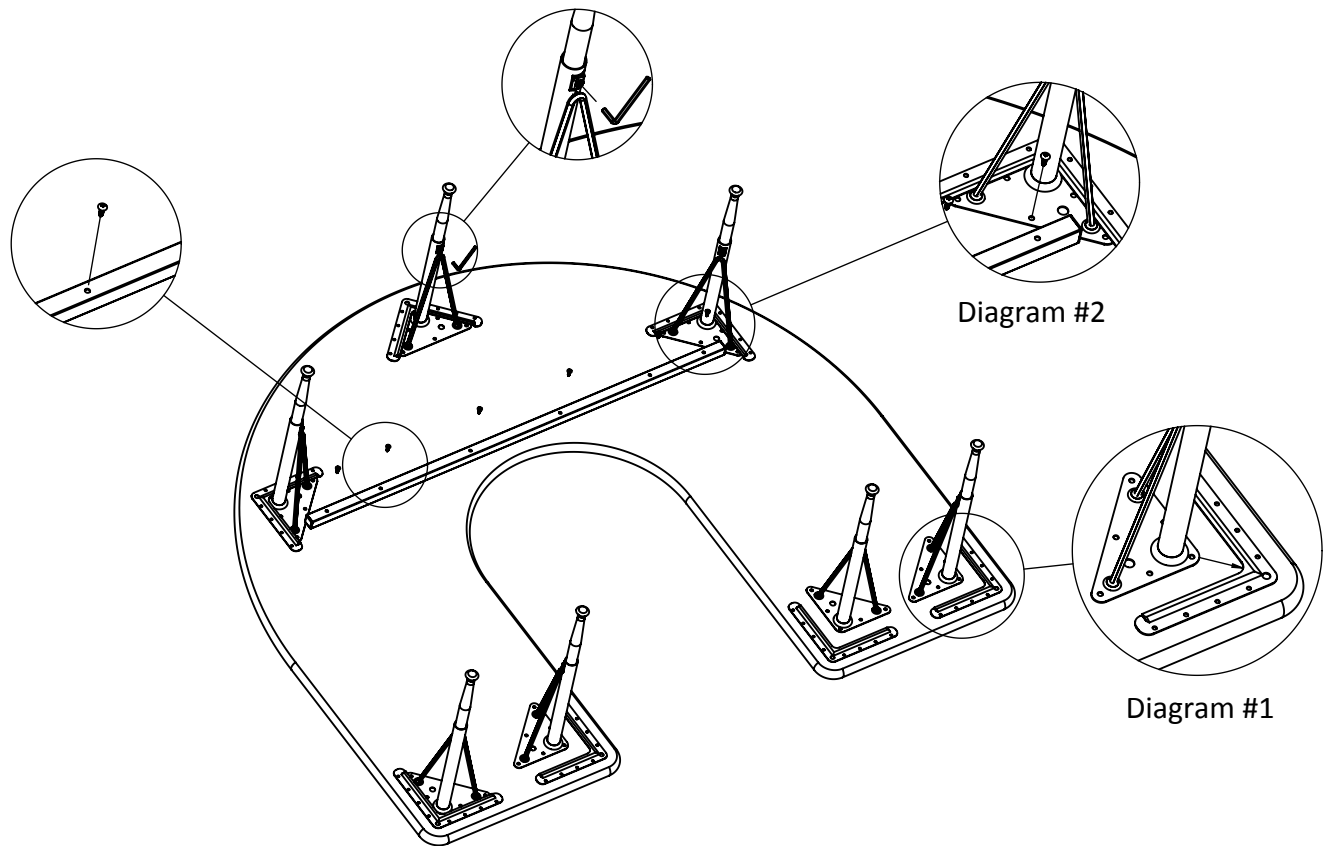

For Assistance in assembling product, missing or damaged parts,
or to place an order, please contact customer service at 800-328-1061
You may also place your order online at
www.smithsystem.com