

# assembly instructions

## uxl tables (leg installation)

**ADDITIONAL TOOLS NEEDED:**

**\*POWER DRILL\***

**TOOLS, HARDWARE & COMPONENTS:**

- A. uxl work surface
- B. Nyloc bolts (2 per leg)
- C. 5mm allen key extension bit for power drills
- D. uxl leg set



A.



B.



C.



D.

\*legs with casters come with 13mm wrench for securing casters (casters packed with legset).

- check that all components are accounted for and undamaged before assembly.
- assemble product in a clean, dry area; if cleaning is necessary, use a mild cleaner and damp cloth.
- for larger units, a second person is recommended for assistance in the assembly process.



1. begin by placing your work surface laminate side down on a clean dry area.
2. place the threaded holes of the first uxl leg against the frame's leg bracket.
3. using supplied 5mm allen key drill bit; attach the bolt and allen key.



4. hand tighten the nyloc bolt into the hole while holding the leg from behind.



5. insert 5mm allen key drill bit into power drill - secure bit in place - and proceed to tighten and secure the nyloc bolts in place.

Continue the same assembly process with the remaining uxl legs on your table or desk.

*5a. for UXL tables / desks with glides - flip your table right-side-up (with the help of an assistant) and your table is ready for use.*

*5b. for UXL tables / desks with casters - see page 2.*


For assistance in assembling product, missing or damaged parts or to place an order, please contact our customer service department @ 1-800-328-1061.

# assembly instructions

## uxl tables (caster installation)

### UXL LEG SETS WITH CASTERS

- A. uxl leg set with casters
- B. uxl caster wrench (13mm)
- C. uxl leg set caster pack

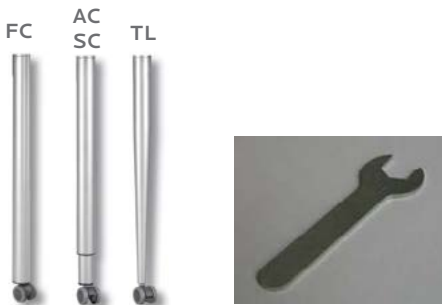

A.

B.



C.

\*legs with casters come with 13mm wrench for securing casters (casters packed with legset).

- check that all components are accounted for and undamaged before assembly.
- assemble product in a clean, dry area; if cleaning is necessary, use a mild cleaner and damp cloth.
- for larger units, a second person is recommended for assistance in the assembly process.



1. insert caster into threaded hole on bottom of each leg - proceed to hand tighten the nut.



2. with the nut hand-tight, use the supplied 13mm wrench to fasten & secure the caster in place.

Continue the same assembly process with remaining uxl legs on your table or desk(s).

3. flip your table right-side-up (*with the help of an assistant*) and your table is ready for use.